



## USD A3 npr PRTF - Instruction for use

1. Break and remove the snap cap.
2. Slide the dispense head onto the fitting on top of the keg.  
(Take care that the **dispense head is fully engaged/slide on to the fitting**, to avoid fitting damage while pressing the handle down.)
3. Push down the dispense head handle.  
The keg is now ready to dispense.

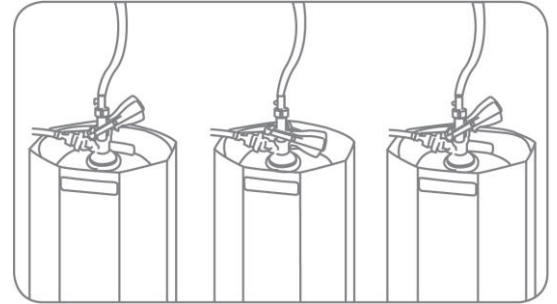

## USD A3 npr PRTF - Instruction for disposal

1. When the keg is empty, pull the dispense head handle upward.
2. Gently slide the dispense head off the keg.
3. Push the pressure relief tool (PRTF) into the fitting.
4. When **fully depressurised**, flatten the keg. Send the petainerKeg™ for recycling in accordance with local recycling rules and regulations.

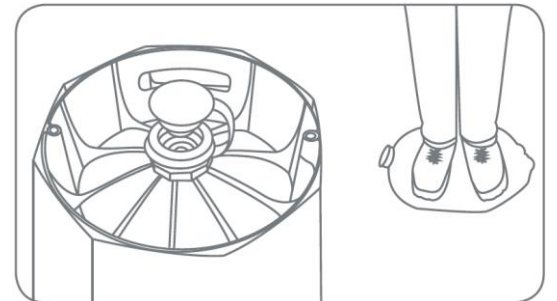

Alternative before disposal:

Remove the depressurised keg from its outer casing. Using pliers, remove the pin securing the keg top and detach. Flatten the petainerKeg™ and the polypropylene casings.



The petainerKeg™ USD A npr (without automatic pressure relief function) can be uncoupled and recoupled for cleaning of the dispense line, or for other reasons.

Take care.  
The petainerKeg™ is under pressure.