



USD A3 npr - Instruction for use

1. Break and remove the snap cap.
2. Slide the dispense head onto the fitting on top of the keg.
(Take care that the **dispense head is fully engaged/slide on to the fitting**, to avoid fitting damage while pressing the handle down.)
3. Push down the dispense head handle.
The keg is now ready to dispense.

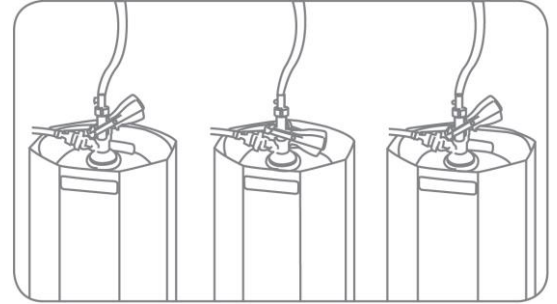

USD A3 npr - Instruction for disposal

1. When the keg is empty, pull the dispense head handle upward.
2. Gently slide the dispense head off the keg.
3. Slide on the depressurising tool (Keg-Entlüfter) and turn the screw clockwise until the pressure is released. Alternative depressurising: Close CO2 when the keg is empty and open the dispenser tap to depressurize the keg.
4. When fully depressurised, flatten the keg, turn the screw counter-clockwise, slide off the tool and send the petainerKeg™ for recycling in accordance with local recycling rules and regulations.

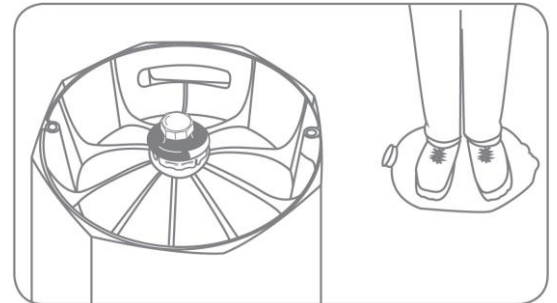

Alternative before disposal:

Remove the keg from its outer casing. Using pliers, remove the pin securing the keg top and detach. Flatten the petainerKeg™ and the polypropylene casings.



The petainerKeg™ USD A3 npr (with no automatic pressure relief valve) can be uncoupled and recoupled for cleaning of the dispense line, or for other reasons.

Take care.
The petainerKeg™ is under pressure.